


BT Agile Connect

Getting set up

1. Let's check you have everything...

Agile Connect device with power supply

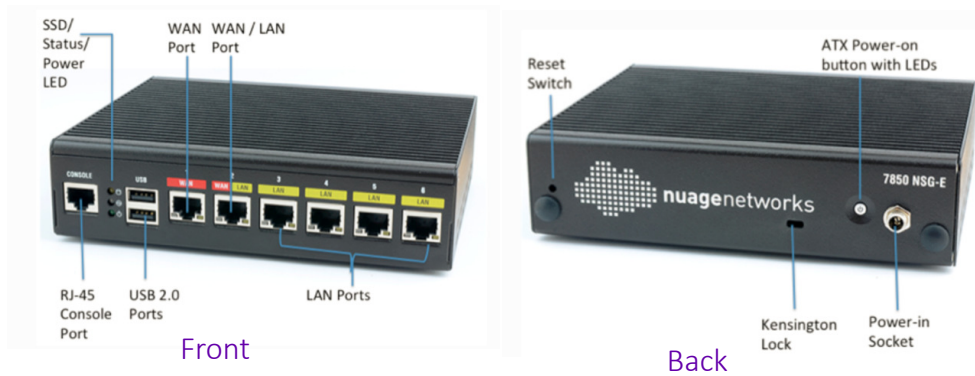

Ethernet for LAN

Connectivity to your local network, let's say your office or building.



Ethernet for WAN


Connectivity to your company's wider network.

? Something missing? Call your network administrator.

You'll also need...



A laptop to download some software settings.

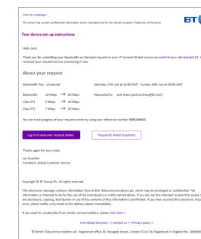

The 'device setup' email from BT look in your inbox or junk mail.

2. Now we need to set up your device...


1



AC Power


Connect the power supply to the device and connect to the mains.
Do not turn it on.

2

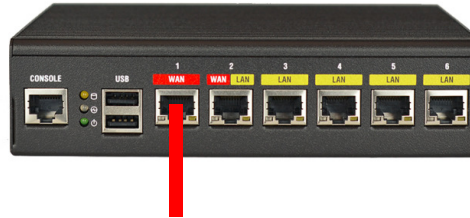

Plug one end of the red Ethernet cable into Port 1 (labelled WAN) and plug the other end to your router.

3

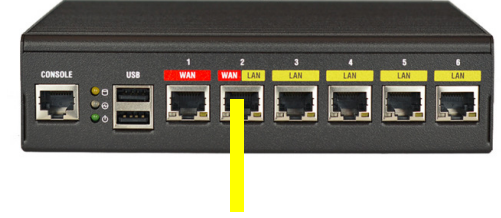

If you have a second Internet connection, use a yellow Ethernet cable and plug this into Port 2, labelled WAN/LAN and plug the other end to your router.

4



Power on your laptop. Open the 'device setup' email from BT. Switch off the WiFi on your laptop.

5



Connect the remaining Ethernet cable (yellow) and plug into Port 6 of the device and plug the other end into your laptop.

6




Press the power button  to turn on the device.

 Need help? Call your network administrator.

3. Now for the software update...

1

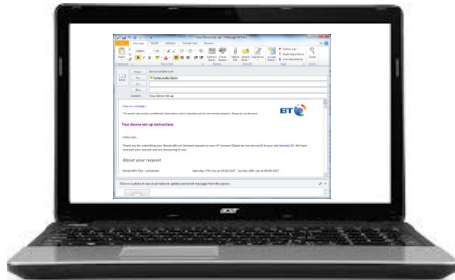


Go to the 'device setup' email and click on the link that says 'link name?'

2



You will be guided through a number of screens.

3

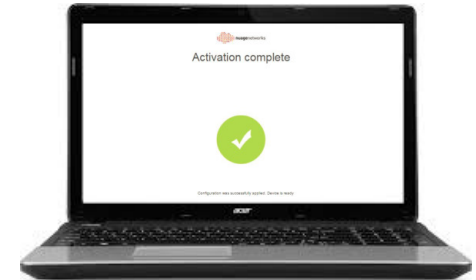

You're done!

